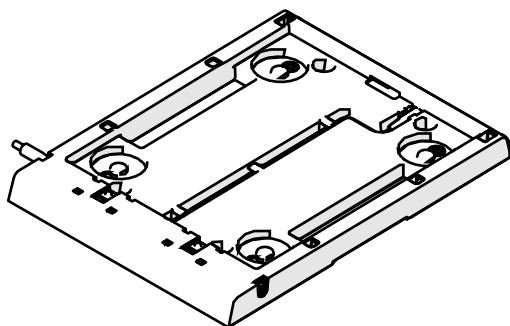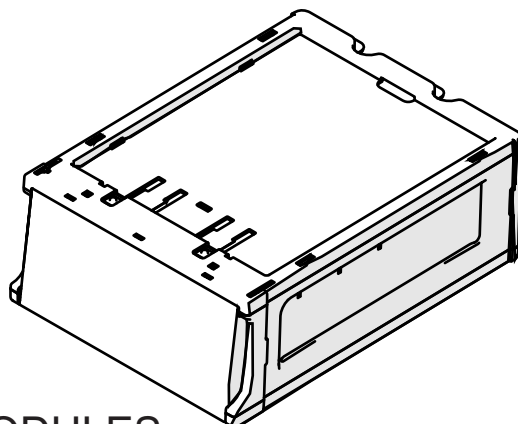# ASSEMBLY INSTRUCTIONS FOR LIT LOTTERY SCRATCH-OFF DISPENSERS

PARTS:

BASES

MODULES
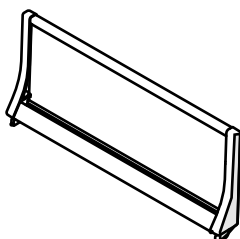
SUCTION CUPS

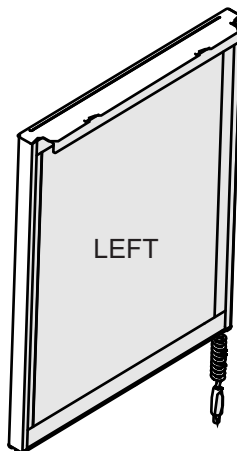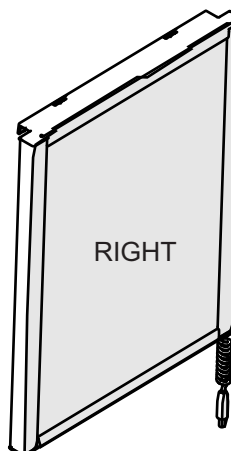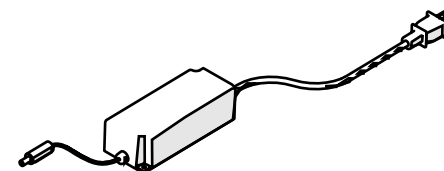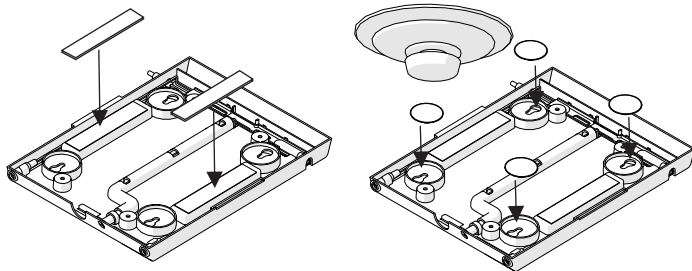TAPE

SCREWS

CLIPS

HEADER

SIDE PANELS

LEFT

RIGHT

POWER SUPPLY

ASSEMBLY INSTRUCTIONS FOR LIT LOTTERY SCRATCH-OFF DISPENSERS
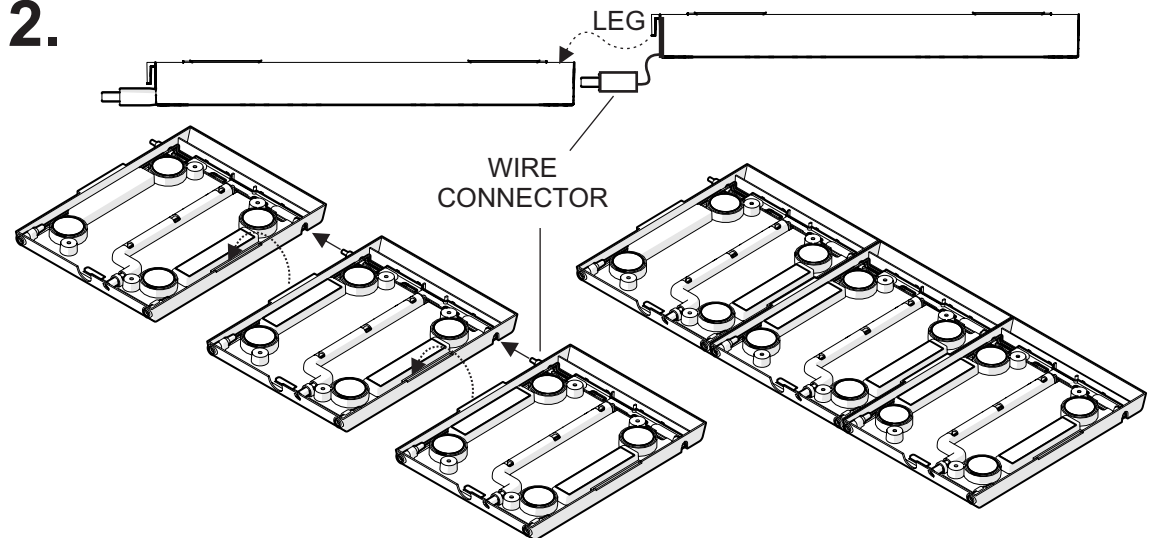
1.

Determine which mounting method you will use. The methods are tape, suction cups or screws.

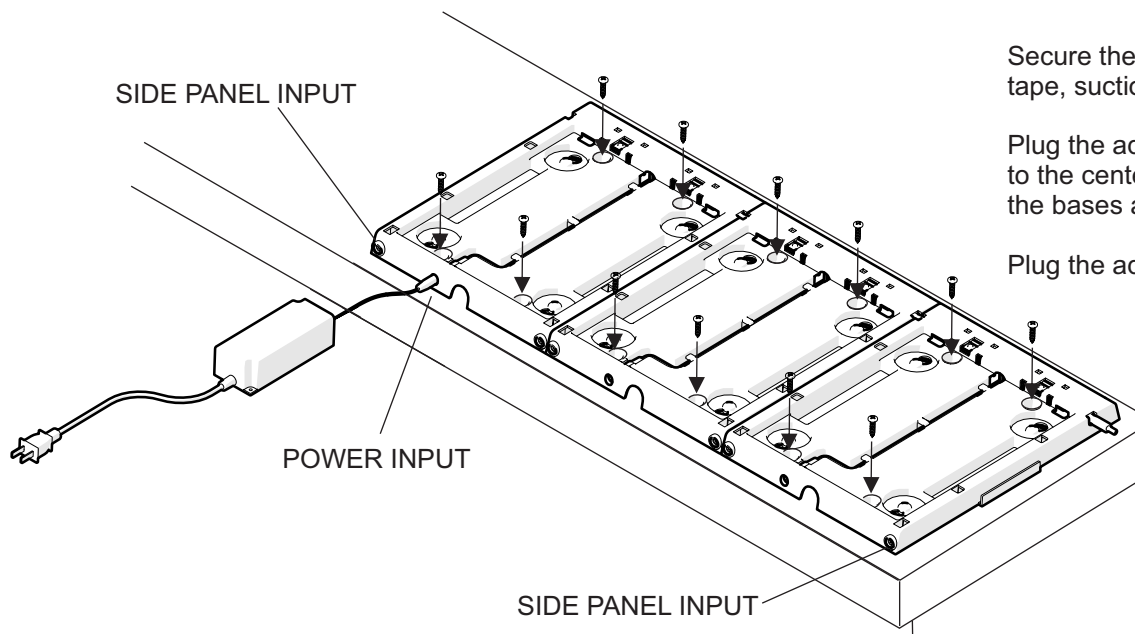If tape will be used apply the tape strips to the bottom of the base as shown.

If the suction cups will be used install them in the key slots under the base. Press them into the large end of the slot. Pull them into the narrow end of the slot.

2.

LEG

WIRE CONNECTOR

Connect the bases needed for your configuration. Turn the base upside down to access the wiring. Pull the wire connector out of the access hole. Insert the connectors into the base beside it. After the wiring is connected lift the bases slightly and insert the legs into the slots to connect the bases together.

3.

SIDE PANEL INPUT

POWER INPUT

SIDE PANEL INPUT

Secure the bases to the counter using the applied tape, suction cups or screws in the wells shown.
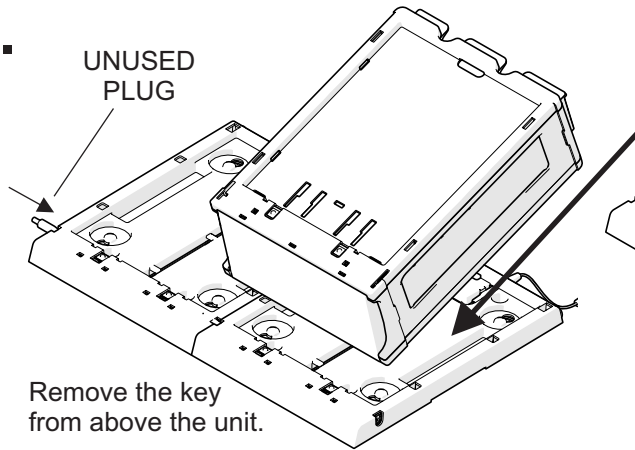
Plug the adapter into the base. Use the input next to the center finger hole. The inputs on the ends of the bases are for the lit side panels.

Plug the adapter into an outlet.

ASSEMBLY INSTRUCTIONS FOR LIT LOTTERY SCRATCH-OFF DISPENSERS
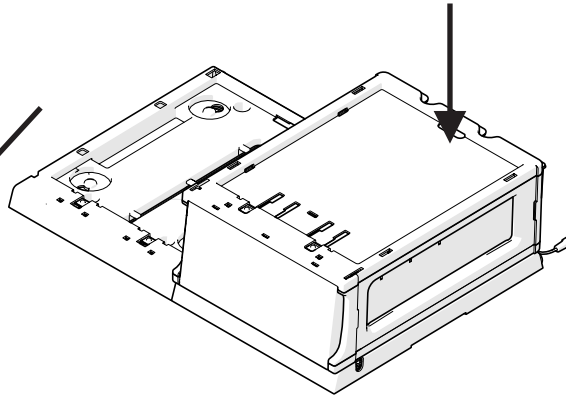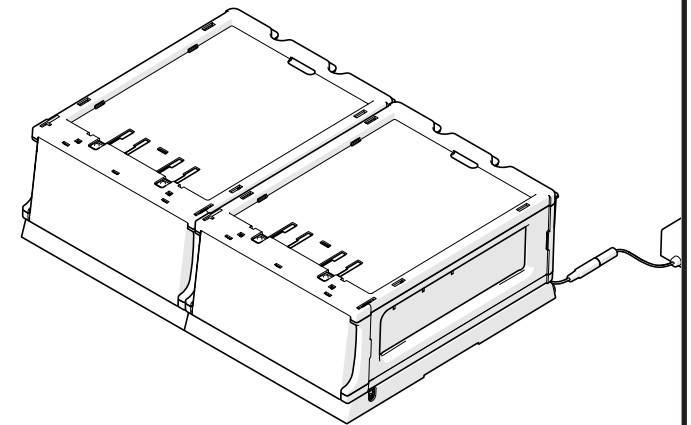
4.

UNUSED PLUG

Remove the key from above the unit.

Push the unused plug into the last base to conceal it.
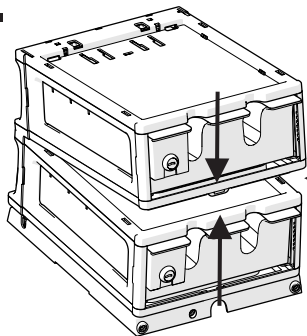
Slide a module onto the base as shown.

Push the rear of the module down to lock it in place. Each module should light up as they are properly connected the base.
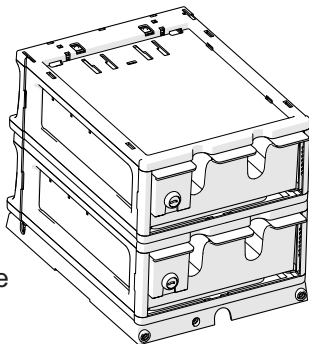
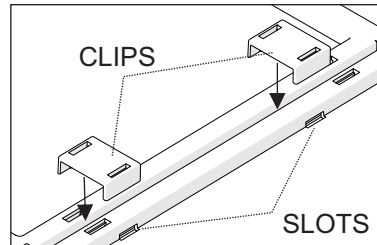Install a module onto each base.

5.

SNAP TOGETHER

Stack the modules installing them in the same manner as step 3.

Pinch the rear of the modules to snap them together. Make sure the modules snap together and are level.
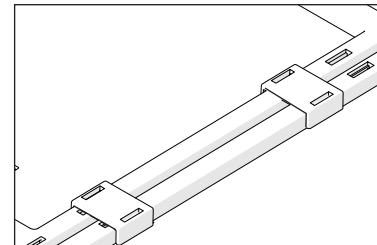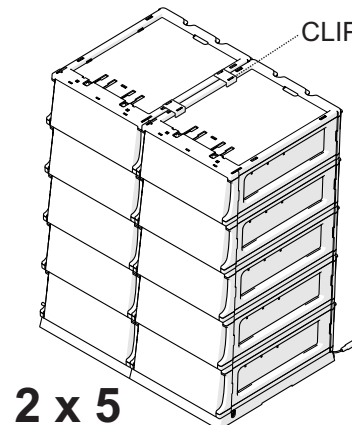
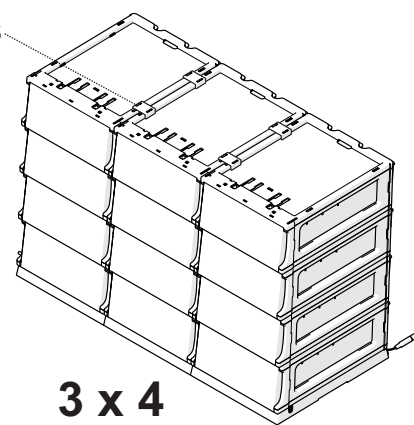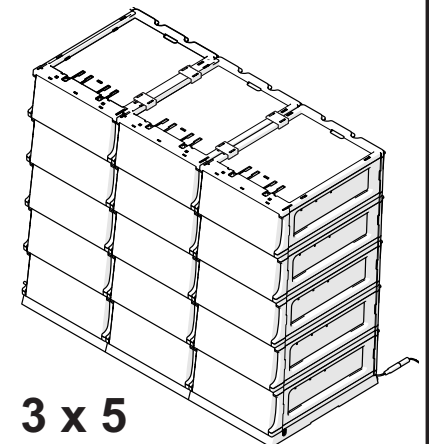**6.** CLIP THE TOP MODULES TOGETHER SIDE BY SIDE

CLIPS

SLOTS

CLIPS

Continue stacking the modules to assemble the configuration needed. Each module should light up as it is installed. When your configuration is complete clip the tops of the modules together side by side.
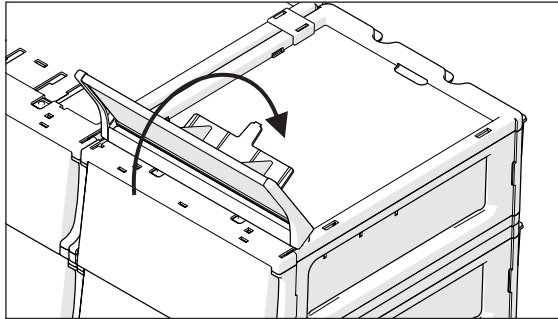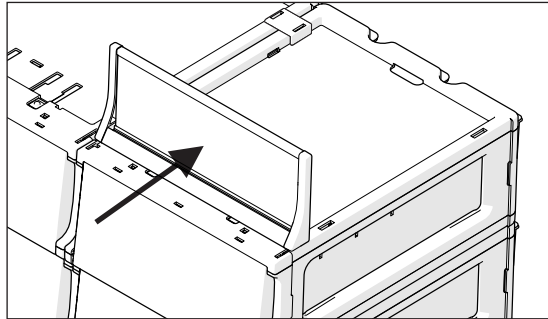
2 x 5

3 x 4

3 x 5

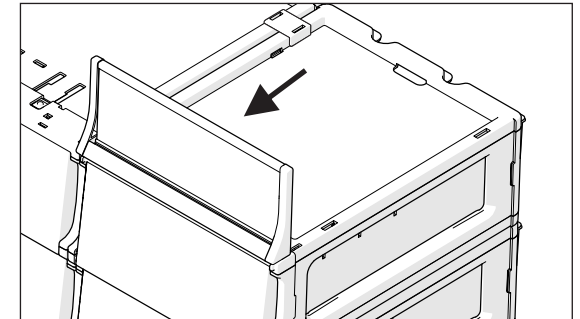# ASSEMBLY INSTRUCTIONS FOR LIT LOTTERY SCRATCH-OFF DISPENSERS

7.

Install the headers at the top of the modules. Angle the side tabs into the slots.

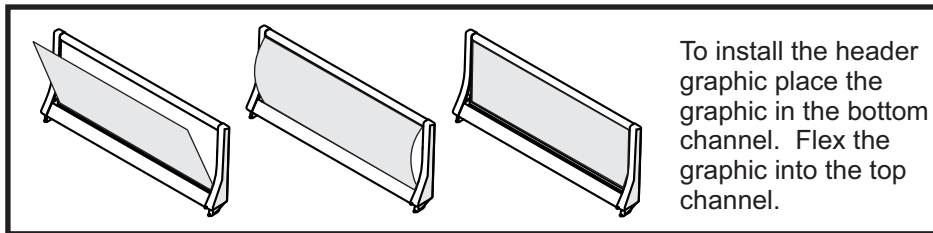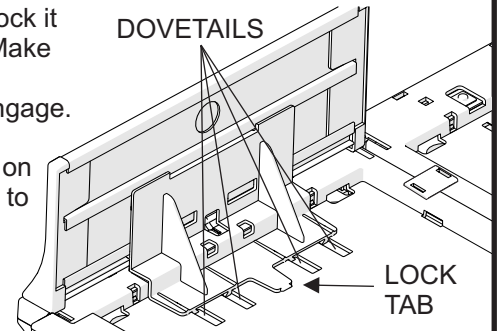Push the header back to engage the dovetails on the bracket.

Slide the header forward to lock it on place. Make sure all the dovetails engage.

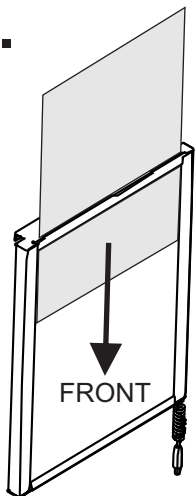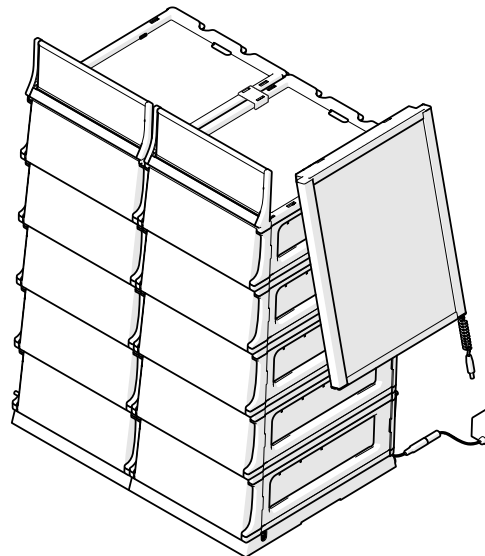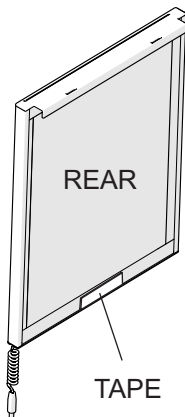Push down on the lock tab to be sure it's engaged.

To install the header graphic place the graphic in the bottom channel. Flex the graphic into the top channel.

DOVETAILS
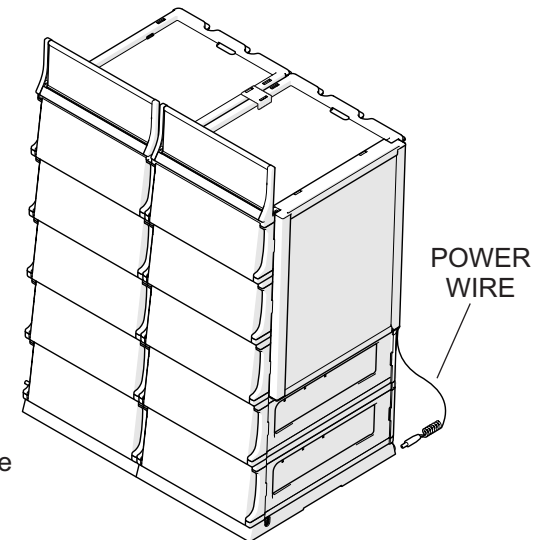
LOCK TAB

8.

FRONT

Slide the graphic into the side panel.

REAR

TAPE

Install the lit side panels. There are rights and lefts which is determined by the location of the power wire. The power wire is always at the rear of the display.

Peel the backing from the tape at the bottom rear of the panel. Hang the panel on the top module and adhere the bottom edge.

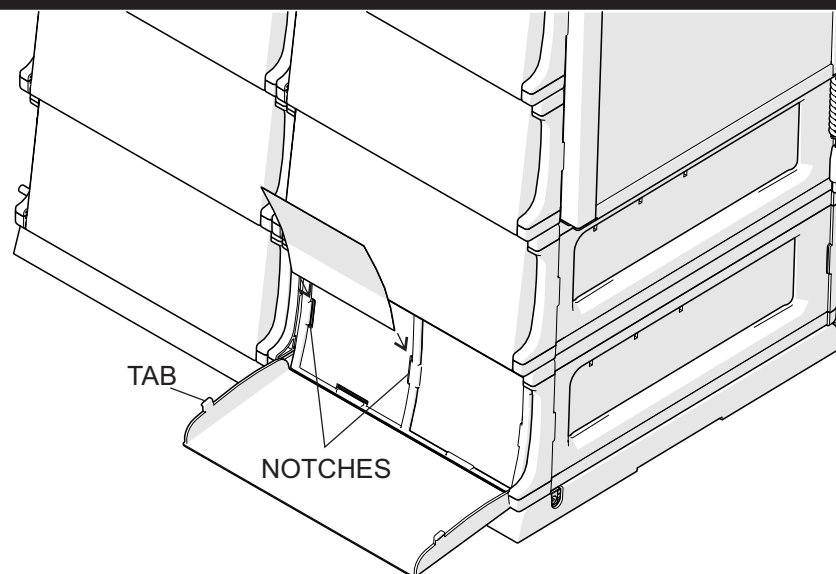Plug the power wire into the bottom corner of the base.

POWER WIRE

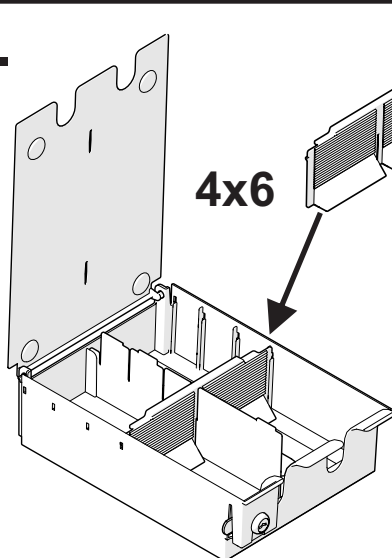# ASSEMBLY INSTRUCTIONS FOR LIT LOTTERY SCRATCH-OFF DISPENSERS

9.

Flip the front lens down by flexing the sides in to release the tabs.

Slide the ticket graphic behind the notches. Make sure the graphic represents the ticket that will dispensed from that bin.
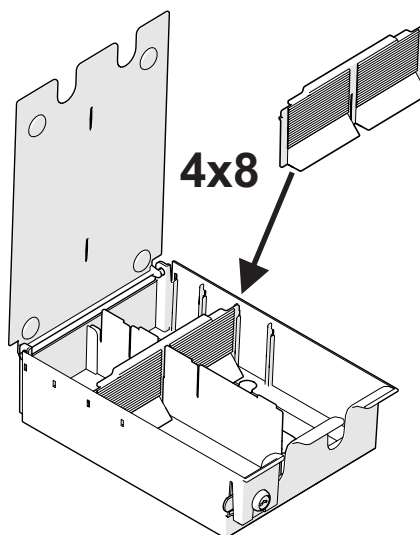
TAB

NOTCHES

10.

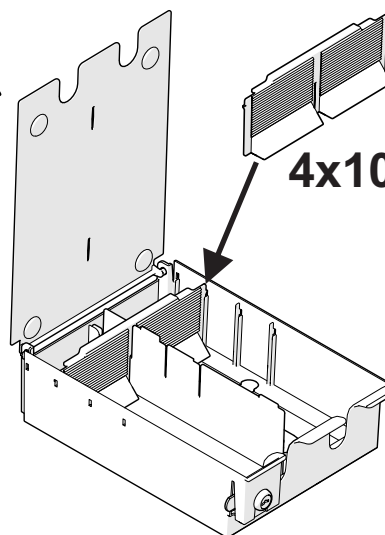**4x6**

4x8

4x10

8x12

Adjust the bins to fit the cards which will be dispensed.

Slide the cross divider into the first slot on the center divider to dispense the **4x6 tickets.**
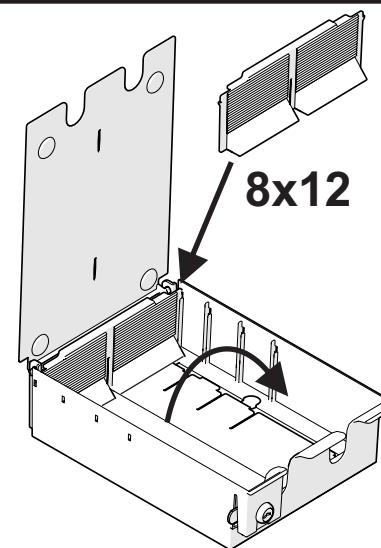
Slide the cross divider into the 2nd slot on the center divider to dispense the **4x8 tickets.**

Slide the cross divider into the 3rd slot on the center divider to dispense the **4x10 tickets.**
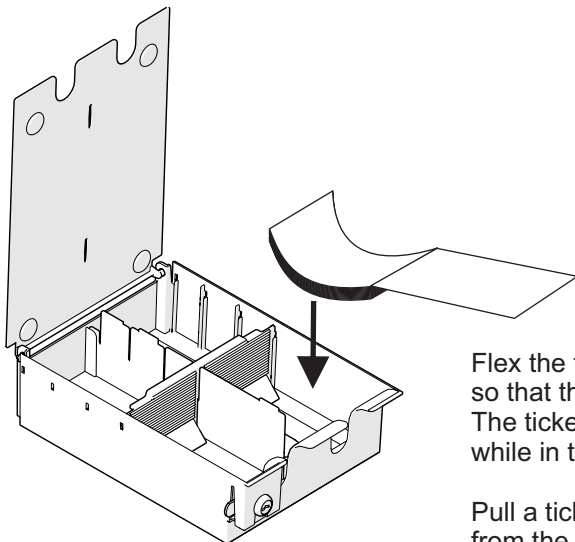
To dispense the **8x12 tickets** first fold the center divider down to the floor. Slide the cross divider into position along the backwall of the tray.
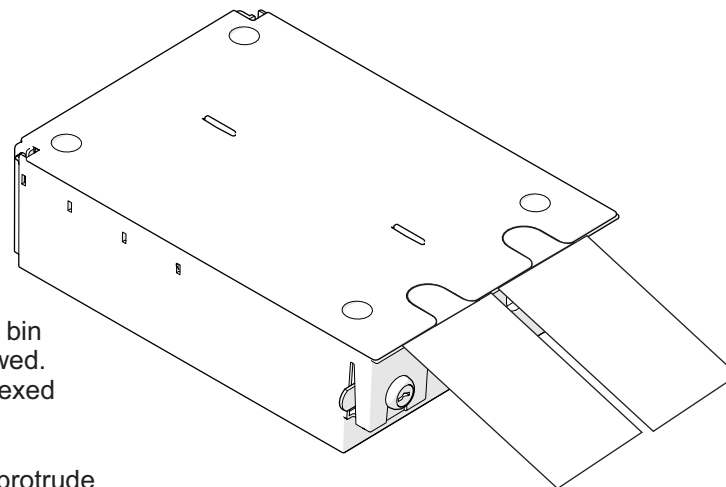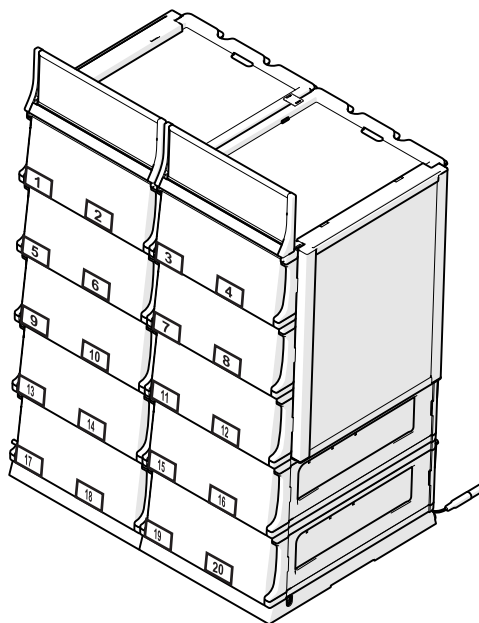
11.

Flex the tickets into the bin so that they remain bowed. The tickets must stay flexed while in the bin.
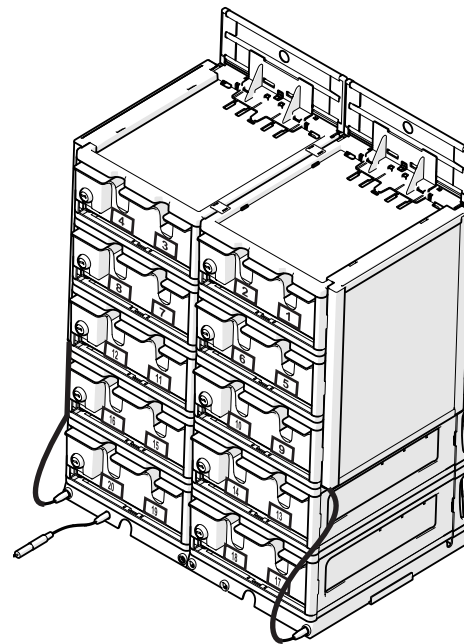
Pull a ticket forward to protrude from the bin slot.
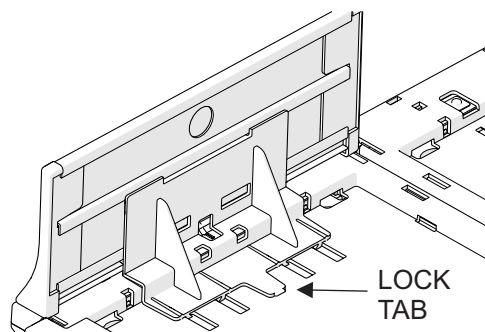
12.

Adhere the number stickers to the front lens to identify the tickets (location TBD).

Adhere the number stickers to the rear of the bins which coincide with the front stickers (location TBD).
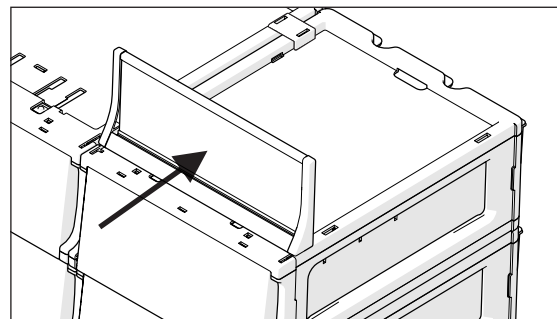
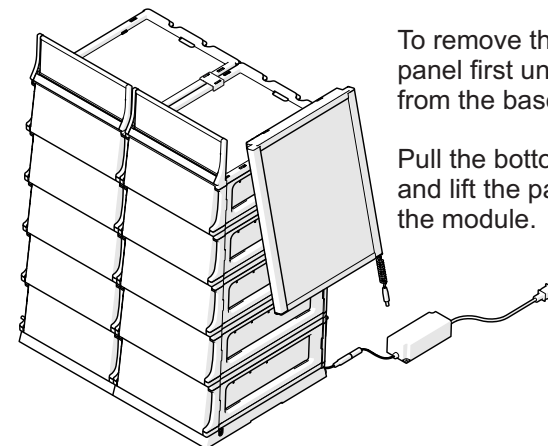# ASSEMBLY INSTRUCTIONS FOR LIT LOTTERY SCRATCH-OFF DISPENSERS

HEADER REMOVAL

LOCK TAB

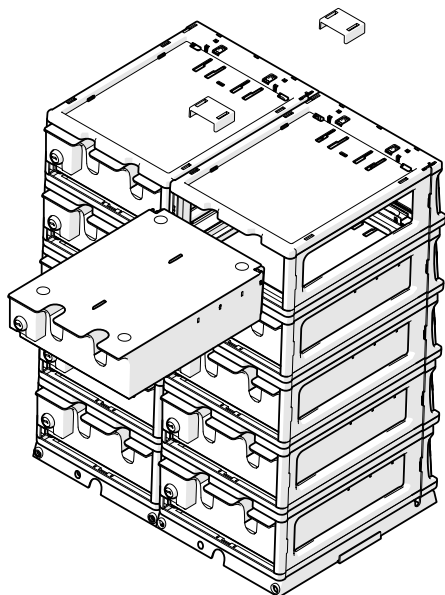To remove the header release the lock tab. Slide the header back to disengage it from the module.
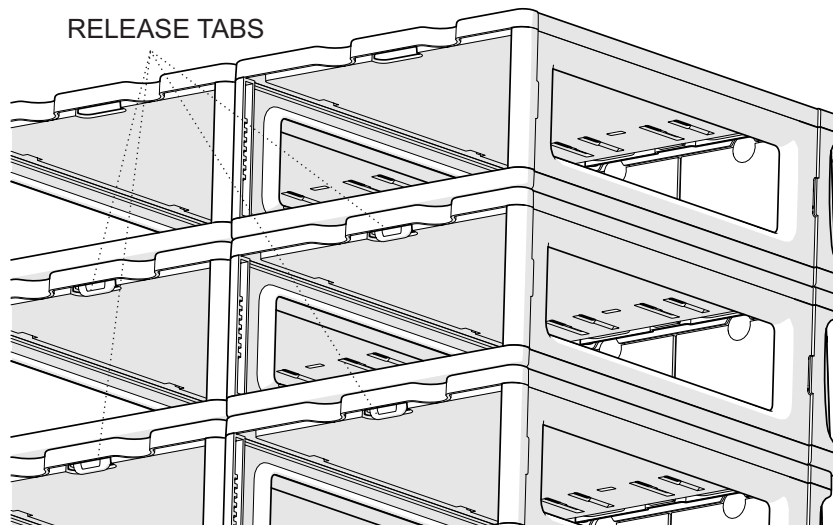
SIDE PANEL REMOVAL

To remove the side panel first unplug it from the base.

Pull the bottom forward and lift the panel off the module.
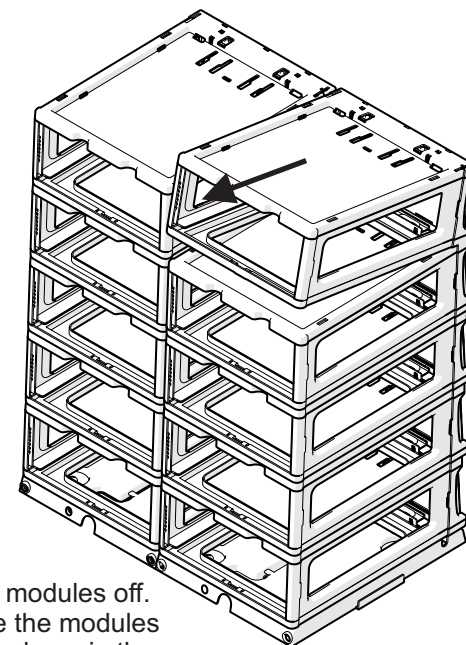
MODULE DISASSEMBLY

RELEASE TABS

To unassemble the system first remove the top clips. Unlock and remove the drawers.

Push the release tab inward to separate the modules.

Lift the modules off. remove the modules from the base in the same manner.